



# CR-MINI-MAG-SHOCK

**TWO WAY WIRELESS  
MAGNETIC DOOR/WINDOW CONTACT  
& SHOCK DETECTOR**

**INSTRUCTION MANUAL  
P/N 7101689\_C**

## PRODUCT FEATURES

The CR-MINI-MAG-SHOCK provide perimeter protection for premises with early warning upon attempted intrusion. CR-MINI-MAG-SHOCK device analyzes shocks while ignoring background vibrations. It can be configured Over-The-Air and feature a 5 year battery life.

- Freewave2™ Two Way ISM
- GFSK with 5 frequencies & LBT
- Immunity to attenuation feature
- Powered by 1 Lithium batteries 1.5V 1250mAh, size: AAA
- Contact Open/Close transmission
- Shock detection transmission
- Tamper Open/Close transmission
- Battery life up to 5 years
- Operating Frequencies: 868MHz or 916MHz
- Event Transmission:
  - Alarm
  - Tamper Open/Close
  - Supervision
  - Battery status
- Bi-Color LED indications
- Up to 500m transmission range in open space
- Remotely configurable

## DETECTOR OPENING

Figure 1  
Pull out the detector cover

## CIRCUIT LAYOUT

Figure 2  
Remove the batteries cover

## BATTERY INSERTION

Figure 3

Batteries can be replaced by the user  
Battery type: Lithium. 1.5V 1250mAh Size: AAA

## DETECTOR MOUNTING

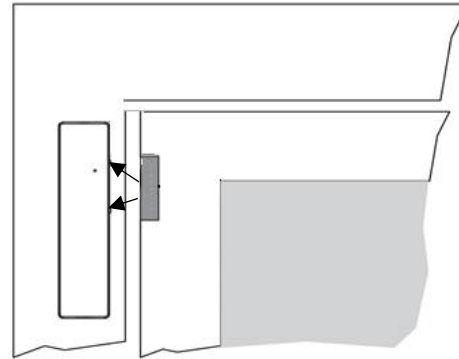


Figure 4

Place the Magnet unit near this marking  
Installation screws: ST2.9X13

## DETECTOR OPENING

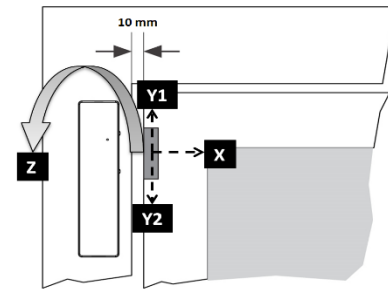


Figure 5

Basic installation at 10mm between CR-MINI-MAG-SHOCK and Magnet Unit.





Configurations	Axis	Removal Distance (mm)	Approach Distance (mm)
Wood	X	20	16
	Y	60	38
	Z	30	26
Iron	X	25	13
	Y	36	20
	Z	34	25

## LEARNING PROCESS

For pairing process, please refer to your control panel instructions.

To pair your device with Shepherd™ panel, please proceed as follows:

1. Enter in installing mode via the "Installer Webpage"
2. Go to "Zones" and select the zone # you want to learn
  1. Add Zone -(Reminder: insert Link Type "ISM", device's ID, Device Type "Magnetic & vibration sensor".)
  2. Set the detector configuration: supervision time, VIB sensitivity, and save configuration.
3. Place a battery as instructed in Figure 3 and wait until the Red / Green LED stops blinking.
4. The device should register to the Control Panel.
5. When registration process is successfully completed, the Green LED will constantly light ON for 3 seconds and then turn OFF.
6. If Green LED continues flashing more than 5 minutes and stopped, please check CR-MINI-MAG-SHOCK settings details, remove battery and repeat steps 3,4,5.
7. If Led flashes green constantly, please check if device's ID is correct or missing.

DETECTOR TESTING	BATTERY REPLACEMENT	SPECIFICATION	STANDARDS APPROVALS																												
<p><b>Transmission Test</b> Go to OVERVIEW level in installer webpage programming mode, Identify and locate the tested Zone. Physically Remove the magnet from the sensor, the open alarm appears in STATE column, return the magnet back and verify ready state. <b>Note:</b> refresh the web page display in case you don't see the change</p> <div style="border: 1px solid black; width: 100px; margin: 10px auto; text-align: center;">Zone # Open</div> <p><b>Tamper Transmission Test</b> Pressing and releasing the tamper (push button) enables the TAMPER transmission test feature. Use the overview level as above for Transmission Test</p> <p><b>EVENT TRANSMISSION</b></p> <p><b>SUPERVISION</b> – A periodical transmission (configurable) indicating detector's presence.</p> <p><b>ALARM</b> – Alarm transmission triggered by the device indicating opening or shock detection. The Red LED will blink once.</p> <p><b>LOW BAT</b> – Whenever the battery reaches the low level (1.4V), a Battery Low signal will be sent. When Battery level drops below Cut Off level (1.2V) the device will stop functioning and the Red LED will blink for 10 seconds and then turned Off.</p> <p><b>TAMPER</b> – Whenever the cover is removed from the device or the device is tear off from the wall, a message will be transmitted with "Tamper ON" signal. When cover will be returned a "Tamper OFF" signal will be transmitted.</p>	<p style="text-align: center;">Figure 5</p> <div style="border: 1px solid black; padding: 10px; text-align: center;"> <p><b>The battery must be replaced by</b></p> <p><b>Lithium. 1.5V 1250mAh Size: AAA</b></p> </div> <p style="text-align: center;"><b>CAUTION</b></p> <p style="text-align: center;"><b>RISK OF EXPLOSION</b> <b>IF BATTERY IS REPLACED BY DIFFERENT TYPE / MODEL.</b></p> <p style="text-align: center;"><b>DISPOSE USED BATTERY</b> <b>ACCORDING TO ITS INSTRUCTIONS</b></p> <p style="text-align: center;"><b>DEVICE SHOULD BE OPENED ONLY USING DEDICATED</b> <b>TOOL IN ORDER TO AVOID MECHANICAL DAMAGE</b></p>	<table border="0"> <tr> <td>Detection Method</td> <td>Magnetic Field Sensor</td> </tr> <tr> <td>Communication Protocol</td> <td>Freewave2™ Two Way ISM GFSK with 5 frequencies &amp; LBT</td> </tr> <tr> <td>Operating Frequencies</td> <td>868-869MHz / 916-917MHz</td> </tr> <tr> <td>Identification</td> <td>Unique ID serial number – 24 bit</td> </tr> <tr> <td>Events Transmission</td> <td>Alarm, Tamper, Supervision, Low Bat, Keep Alive.</td> </tr> <tr> <td>Supervision Time</td> <td>7 min by default (configurable between 1 to 30 min)</td> </tr> <tr> <td>Transmission Range</td> <td>500m in open space</td> </tr> <tr> <td>Battery</td> <td>Lithium. 1.5V 1250mAh Size: AAA</td> </tr> <tr> <td>Battery life</td> <td>Up to 5 years Standby ~5 µA Receive mode ~24 mA Transmit mode ~50 mA</td> </tr> <tr> <td>Current Consumptions</td> <td>Transmit power &lt; 14dBm Low Bat 1.4V Cut Off 1.2V</td> </tr> <tr> <td>Tamper Switch</td> <td>Front Cover Removal</td> </tr> <tr> <td>Operating temperature</td> <td>-10°C to +55°C</td> </tr> <tr> <td>Dimensions</td> <td>100mm x 23mm x 22mm</td> </tr> <tr> <td>Weight (incl. battery)</td> <td>50gr.</td> </tr> </table> <p><b>Shock sensitivity levels Select by EN standards</b></p> <p>The detector has 5 adjustable shock sensitivity levels (0 to 4). The glass window surface EN approved for Sensitivity Level 0 (Lowest sensitivity level). The Wooden plate surface EN approved for Sensitivity Level 3. The Concrete plate surface EN approved for Sensitivity Level 4 (Highest sensitivity level).</p> <p>Sensitivity level can be configured through the installer.</p>	Detection Method	Magnetic Field Sensor	Communication Protocol	Freewave2™ Two Way ISM GFSK with 5 frequencies & LBT	Operating Frequencies	868-869MHz / 916-917MHz	Identification	Unique ID serial number – 24 bit	Events Transmission	Alarm, Tamper, Supervision, Low Bat, Keep Alive.	Supervision Time	7 min by default (configurable between 1 to 30 min)	Transmission Range	500m in open space	Battery	Lithium. 1.5V 1250mAh Size: AAA	Battery life	Up to 5 years Standby ~5 µA Receive mode ~24 mA Transmit mode ~50 mA	Current Consumptions	Transmit power < 14dBm Low Bat 1.4V Cut Off 1.2V	Tamper Switch	Front Cover Removal	Operating temperature	-10°C to +55°C	Dimensions	100mm x 23mm x 22mm	Weight (incl. battery)	50gr.	<p>The CR-MINI-MAG-SHOCK conforms to the essential requirements set out by:</p> <ul style="list-style-type: none"> <li>RED directive:2014/53/EU</li> <li>EMC directive: 2014/30/EU</li> <li>Low Voltage directive: 2014/35/EU</li> </ul> <p>Harmonized Standards applicable to this products are:</p> <ul style="list-style-type: none"> <li>EN300220-2</li> <li>EN300220-1</li> <li>EN301489-3</li> <li>EN301489-1</li> <li>EN50130-4</li> <li>EN61000-6-3</li> <li>EN62368-1</li> </ul> <p>Additional Standards and Directives applicable to this product are:</p> <ul style="list-style-type: none"> <li>EN50131-2-6</li> <li>EN50131-2-8</li> <li>EN50131-1</li> <li>EN50131-6</li> <li>EN50130-5</li> <li>EN50131-5-3</li> </ul> <p>Certification body: Kiwa Nederland B.V Security Grade 2, Environmental Class II Power supply Type C</p> <div style="text-align: center;">    </div>
Detection Method	Magnetic Field Sensor																														
Communication Protocol	Freewave2™ Two Way ISM GFSK with 5 frequencies & LBT																														
Operating Frequencies	868-869MHz / 916-917MHz																														
Identification	Unique ID serial number – 24 bit																														
Events Transmission	Alarm, Tamper, Supervision, Low Bat, Keep Alive.																														
Supervision Time	7 min by default (configurable between 1 to 30 min)																														
Transmission Range	500m in open space																														
Battery	Lithium. 1.5V 1250mAh Size: AAA																														
Battery life	Up to 5 years Standby ~5 µA Receive mode ~24 mA Transmit mode ~50 mA																														
Current Consumptions	Transmit power < 14dBm Low Bat 1.4V Cut Off 1.2V																														
Tamper Switch	Front Cover Removal																														
Operating temperature	-10°C to +55°C																														
Dimensions	100mm x 23mm x 22mm																														
Weight (incl. battery)	50gr.																														
<p><b>WARRANTY POLICY CERTIFICATE</b></p>		<div style="text-align: center;">  </div>																													
<p>Crow warrants these products to be free from defects in materials and workmanship under normal use and service for a period of 24 months from the last day of the week and year whose numbers are printed on the printed circuit board inside these products.</p> <p>Subject to the provisions of this Warranty Certificate, during the Warranty Period, Crow undertakes, at its sole discretion and subject to Crow's procedures, as such procedures are from time to time, to repair or replace, free of charge for materials and/or labor, products proved to be defective in materials or workmanship under normal use and service. Repaired products shall be warranted for the remainder of the original Warranty Period.</p> <p>All transportation costs and in-transit risk of loss or damage related, directly or indirectly, to products returned to Crow for repair or replacement shall be borne solely by the Purchaser.</p> <p>This Warranty Certificate does not cover products that is defective (or shall become defective) due to: (a) alteration of the products (or any part thereof) by anyone other than Crow; (b) accident, abuse, negligence, or improper maintenance; (c) failure caused by a product which Crow did not provide; (d) failure caused by software or hardware which Crow did not provide; (e) use or storage other than in accordance with Crow's specified operating and storage instructions.</p> <p>There are no warranties, expressed or implied, of merchantability or fitness of the products for a particular purpose or otherwise, which extend beyond the description on the face hereof.</p> <p>This limited Warranty Certificate is the Purchaser's sole and exclusive remedy against Crow and Crow's sole and exclusive liability toward the Purchaser in connection with the products, including without limitation - for defects or malfunctions of the products. This Warranty Certificate replaces all other warranties and liabilities, whether oral, written, (non-mandatory) statutory, contractual, in tort or otherwise.</p> <p>In no case shall Crow be liable to anyone for any consequential or incidental damages (inclusive of loss of profit, and whether occasioned by negligence of the Crow or any third party on its behalf) for breach of this or any other warranty, expressed or implied, or upon any other basis of liability whatsoever.</p> <p>Crow does not represent that these products cannot be compromised or circumvented; that these products will prevent any person injury or property loss or damage by burglary, robbery, fire or otherwise; or that these products will in all cases provide adequate warning or protection.</p> <p>Purchaser understands that a properly installed and maintained product may in some cases reduce the risk of burglary, fire, robbery or other events occurring without providing an alarm, but it is not insurance or a guarantee that such will not occur or that there will be no personal injury or property loss or damage as a result. Consequently, Crow shall have no liability for any personal injury, property damage or any other loss based on claim that these products failed to give any warning. If Crow is held liable, whether directly or indirectly, for any loss or damage with regards to these products, regardless of cause or origin, Crow's maximum liability shall not in any case exceed the purchase price of these products, which shall be the complete and exclusive remedy against Crow.</p>		<p style="text-align: right;">sales@crow.co.il support@crow.co.il</p> <p style="text-align: center;"><a href="http://www.thecrowgroup.com">www.thecrowgroup.com</a></p> <p style="text-align: center;">These instructions supersede all previous issues in circulation prior to April 2019</p>																													

